

SPT-11U Chassis Power Supply Installation Instructions

The SPT-11U chassis includes four (4) factory installed power supplies. These power supplies are hot swappable. This means the power supplies can be replaced or installed while the chassis is running, but only if the remaining power supplies can supply sufficient current to power the modules in the chassis.



To replace a power supply in a SPT-11U chassis:

- 1 Remove the front cover panel, to gain access to the power supply assemblies, by pulling on the spring loaded pins as shown:

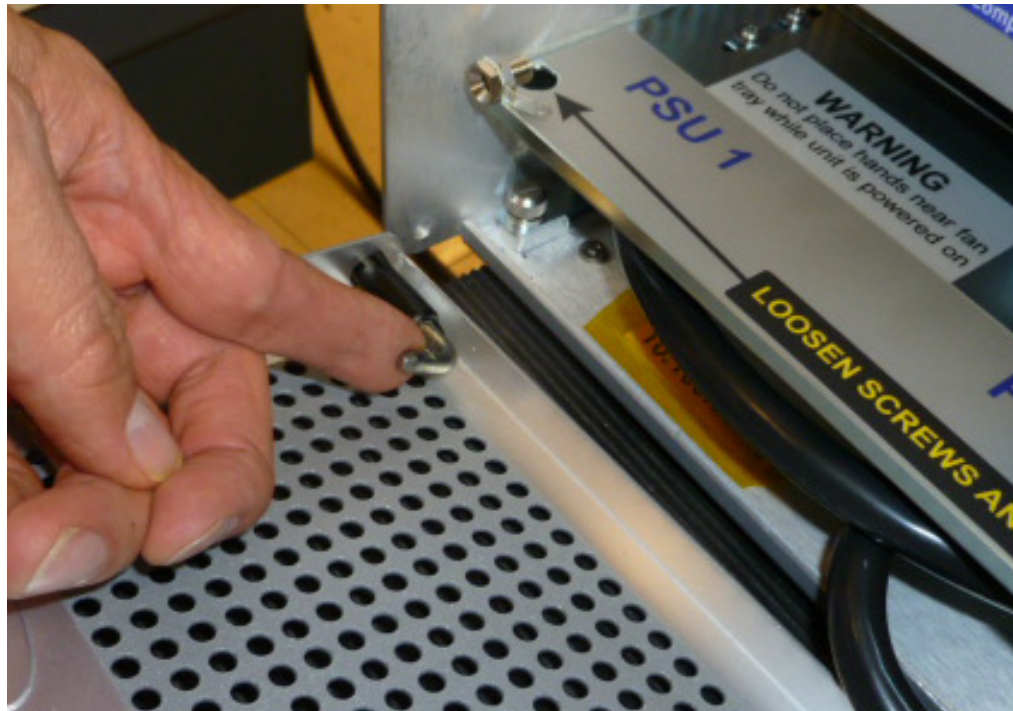


Figure 1. Pull the Spring-loaded Pins

- Using a flat-blade screwdriver, remove the two screws from the cover that retains the internal power cords (one on each side of the chassis) and remove the cover (*Figure 2*).

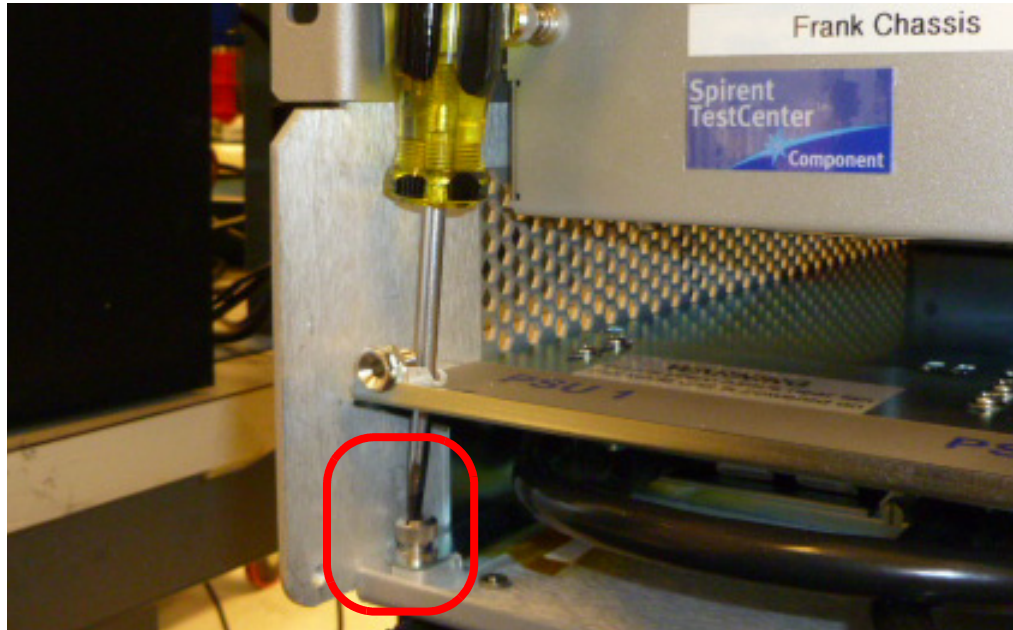


Figure 2. Remove the Screws on Each Side

- Remove the power cord, and use a flat-blade screwdriver to loosen the single screw that retains the power supply you would like to remove (*Figure 3*).



Figure 3. Remove Power Cord and Single Screw

- 4 Lift up on the somewhat hidden handle and pull the power supply out of the chassis (*Figure 4*).



Figure 4. Lift the Handle to Pull Out the Power Supply

Reverse the above procedure to install the new power supply.

How to Contact Us

To obtain technical support for any Spirent Communications product, please contact our Support Services department using any of the following methods:

Americas

E-mail: support@spirent.com

Web: <http://support.spirent.com>

Toll Free: +1 800-SPIRENT (+1 800-774-7368) (North America)

Phone: +1 818-676-2616

Hours: Monday through Friday, 05:30 to 18:00, Pacific Time

Europe, Middle East, Africa

E-mail: support@spirent.com

Web: <http://support.spirent.com>

Phone: +33 (1) 6137 2270 (France)

Phone: +44 1803 546333 (UK)

Hours: Monday through Thursday, 09:00 to 18:00, Friday, 09:00 to 17:00, Paris Time

Asia Pacific

E-mail: support@spirent.com

Web: <http://support.spirent.com>

Phone: +86 (800) 810-9529 (toll-free mainland China only)

Phone: +86 (10) 8233 0033 (China)

Hours: Monday through Friday, 09:00 to 18:00, Beijing Time

The latest versions of user manuals, application notes, and software and firmware updates are available on the Spirent Communications support website at <http://support.spirent.com>.

Information about Spirent Communications and its products and services can be found on the main company website at <http://www.spirent.com>.

Company Address

Spirent Communications, Inc.

26750 Agoura Road

Calabasas, CA 91302

USA

© 2012 Spirent Communications, Inc. All Rights Reserved.