

LockBar SPT-2000A Usage Instructions

The Spirent TestCenter SPT-2000A contains a built-in LockBar that safeguards your Spirent TestCenter test modules by locking them inside your Spirent TestCenter SPT-2000A chassis. This document explains how to use the built-in LockBar.

How it Works

LockBar SPT-2000A is a small metal flap that is hinged to the side of the SPT-2000A. The chassis is shipped with the LockBar positioned toward the back of the chassis. To use the LockBar, pull it toward the front of the chassis so that it overlaps the installed test modules. Then secure the LockBar with the combination lock that is shipped with the chassis. When in use, the built-in LockBar should appear as shown in *Figure 1*. Refer to *“Using the Combination Lock”* on page 2 for details on using the provided combination lock.

To use LockBar SPT-2000, pull the built-in LockBar flap toward the front of the chassis so that it overlaps the installed test modules. Then secure the LockBar with the provided combination lock.



Figure 1. SPT-2000A Chassis with its Built-in LockBar in Use

Using the Combination Lock

The combination lock included in your SPT-2000A chassis shipment is preset at the factory to operate at 0-0-0. To set your own combination, follow these steps:

- 1 With the lock's dial set at 0-0-0, and the dial facing toward you, pull out the lock's shackle (see *Figure 2*).

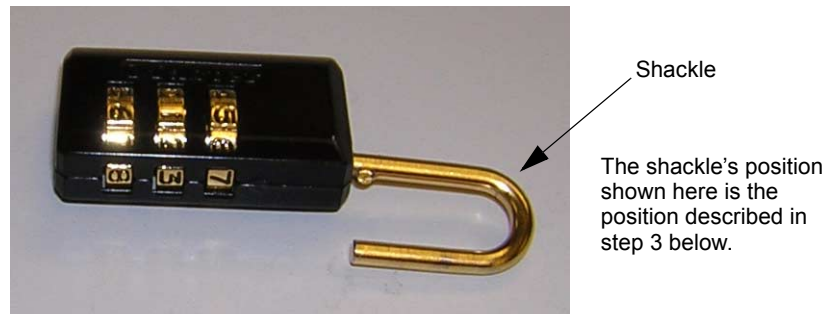


Figure 2. Combination Lock

- 2 Turn the shackle counterclockwise 90 degrees (1/4 turn) and press it down.
- 3 Continue pressing the shackle and turn it another 90 degrees (1/4 turn).
- 4 Set the lock's three dials to your own combination.
- 5 Turn the shackle clockwise back to its original 90-degree position. Then, lift and return the shackle to its closed position.
The lock can now be opened with the combination you have set.
- 6 Lock the LockBar SPT-2000A into place on the Spirent TestCenter SPT-2000A chassis by installing the combination lock into the holes on the built-in LockBar. The installed lock should appear as shown in *Figure 1 on page 1*.

All of the test modules installed in your Spirent TestCenter SPT-2000A chassis are now safe from unauthorized removal. You can only remove the test modules by first removing the combination lock and then pushing the built-in LockBar toward the back of the SPT-2000A chassis.